

1. Time Setting:

1.1 After the batteries be inserted, the music alarm, the screen showing 0:00, 1/1, TUE (DAY), and the temperature is the present condition. You can press any key to stop the music. The default time system is 24hrs.

1.2 Press **DOWN** key to select 12hr/24hr mode;

1.3 Press and hold the **MODE** key to enter time setting mode, the setting step order is hour, minute, year, month and date. Operated the **UP** or **DOWN** key to adjust. After each setting, press **MODE** key to confirm then enter into the alarm setting mode. (Please go to the **Alarm setting and snooze** step 2.2, if you want to set the alarm.) Or you can press the **MODE** key until there is no any words flashing in the screen. It means the setting is exit.

1.4 Day of week will be automatically set.

1.5 During the setting mode, if you don't press any key the screen will stop on the step you are operating until you exit the setting.

2. Alarm Setting and Snooze:

2.1 At normal condition, press and hold the **MODE** key until the Hour time and right corner **TIME** flash , then press **MODE** key 5 times to enter the alarm setting mode (see picture B)

2.2 Now the **ALARM** will appear in the right corner of the display and the hour time is flashing. Use **UP / DOWN** key to set the alarm hour time and press **MODE** key to confirm, then press **UP** or **DOWN** key again to set the minute and press **MODE** key to confirm again.

2.3 This time the **SNOOZE** will display in the right down corner and the words is flashing (See Picture C). Use **UP** or **DOWN** key to set the snooze time you want. The snooze time can be set from 01 to 60 mins. Then press **MODE** key to confirmed. This time you will see the full screen words is flashing, it means it have entered into the reminding date setting. (Please go to the **RMINDING DATE** setting step 4.2 if you want to set.) Please press the **MODE** key until there is no any words is flashing in the screen. The setting is exit.

3. To turn on or turn off the alarm and snooze.

3.1 At normal display (**TIME** mode), Press **SNZ** key one time, the icon (☾) appeared in the screen, it means the alarm had been turn on.

3.2 Press **SNZ** key again the icon **SNOOZE** appeared, it means the snooze turn on. (See picture A)

3.3 Press **SNZ** key again both icons disappear. The alarm and snooze turn off.

3.4 When alarm on, the alarm icon will be flashing, it will last 1 min then enter into snooze if you do not press any key and already turn on the snooze. Now the **SNOOZE** is flashing in the display.

3.5 When the snooze on, the alarm icon and Snooze icon flashing together until 1 min later or you press any key to stop the alarm.

4. Special date Reminding:

4.1 At Time mode, press and hold the **MODE** key until the Hour time and right corner **TIME** flash, then press **MODE** key until see picture D or the right picture.

4.2 You can use **UP** and **DOWN** key to set the date you want.

After each setting, press **MODE** key to confirm then enter into countdown timer setting mode. (Please go to the **Countdown Timer** setting mode step 5.2 directly, if you want to set the countdown timer.) Or you can exit but need to press the **MODE** key until there is no any words flashing in the screen. It means the setting is exit.

4.3 And it starts the special date reminding count down.


4.4 When the count down time is less 999 days but larger than 43days, there is show the days in the middle of display.

4.5 When the count down time is less 42 days/ 999 hour but larger than 16.65 hours/ 999mins, there is show the hours in the display.

4.6 When the count down time is less 999 mins but larger than 16.65 secs., there is show the mins in the display.

4.7 When the count down time is less 999 seconds, it will show the seconds until time off. It will alarm at 0:00 the mid night.

5. Countdown Timer:

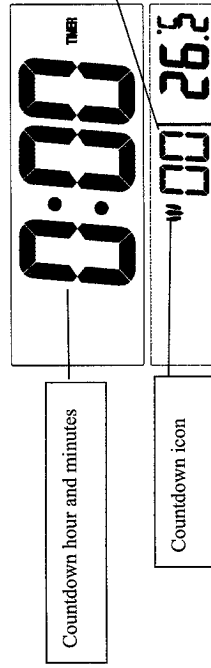

5.1 At Time mode, press and hold the **MODE** key until the Hour time and right corner **TIME** flash, then press **MODE** key until see picture E or the right picture.

5.2 You can use **UP** and **DOWN** key to set the H: MM: SS one by one and **MODE** key to confirm the above setting. When you finished the SS setting, SS still flashing, now please press **SNZ** key to start the countdown timer. When the countdown timer is working, if you press **SNZ** key, the timer will stop but if you press **SNZ** key again it will continue. But if you stop the timer and press **MODE** key, it will clean the countdown message.

Press the **MODE** key again the countdown timer will get into count-up mode.

5.3 The countdown hours can be set from 30:59:59.

5.4 How to start the countdown timer? And how to clean the timer message?

At COUNTDOWN TIMER setting mode When you finished the SS setting, SS still flashing, now please press SNZ key to start the countdown timer. When the countdown timer is working, if you press SNZ key, the timer will stop but if you press SNZ key again it will continue. But if you stop the timer and press **MODE** key, it will clean the countdown message.

6. Count-UP Timer:

6.1 At Time mode, press and hold the **MODE** key until the Hour time and right conner **TIME** flash, then press **MODE** key until see picture F or the right picture, then press the **SNZ** key to start. If you want to stop press **SNZ** key again then you can see the number you count up just now. When you press **SNZ** key again, it will continue. If the timer is stop and press

MODE key can clean the count-up message. Then press **MODE** key again to exit the setting mode.

6.2 The count-up timer is up to 30:59:59.

7. Other Specification:

7.1 At normal time display mode, press **C/F** to select **°C/°F** display

7.2 At normal time display mode, press **DOWN** to select 12/24hrs display


Digital Calendar Clock

Thank you for choosing our product, this product has many editions, please compare the functions of the product before using. Please read this instruction manual before using. Thank you very much!

Functions:

- > 12hr/24hr, HH:MM
- > Calendar (date, week, year--2000 to 2099)
- > Alarm & Snooze
- > Special date Reminding
- > Countdown Timer & Count up timer
- > Temperature (Fahrenheit/Centigrade-0°C to 50°C), Accuracy: ±1°C
- > Power Supply: DC 3V, AAA X 2pcs

TIME MODE DISPLAY (Normal MODE, picture A)

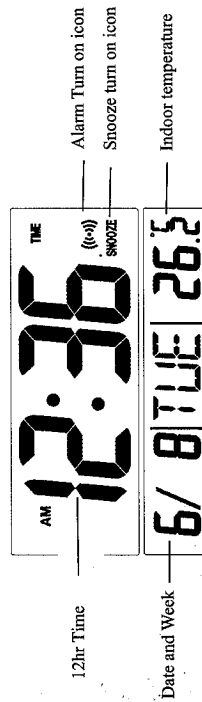

OTHER MODE DISPLAY

