


INCREDI EGG™

COOKING INSTRUCTIONS

FEATURES AND BENEFITS

- Stay-Cool Silicone Grips
- Non-Stick Surface
- Clean Break Shell Cracker
- Built-in Yolk Separator
- Dishwasher Safe

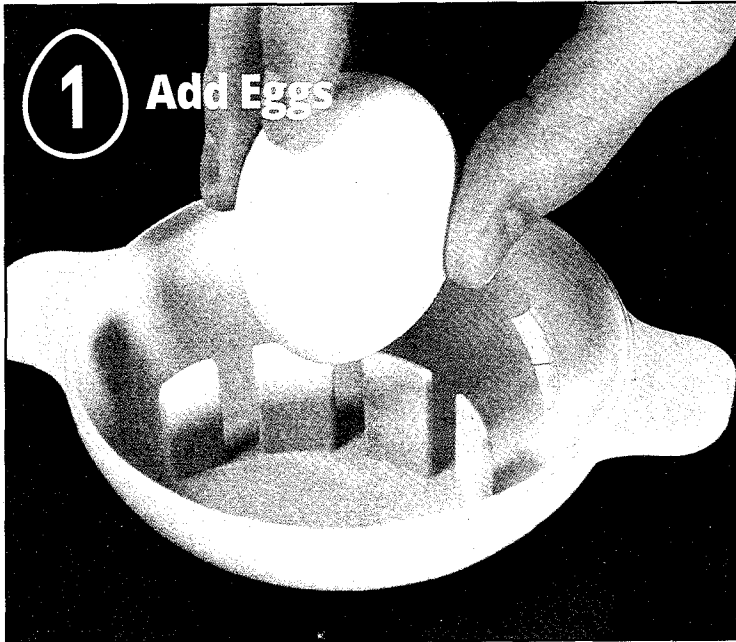

1 Add Eggs

Crack open up to 4 eggs on the shell cracking prongs and add, with any desired ingredients, into Incrediegg bowl.



2 Mix and Microwave

Depending on chosen recipe, mix contents, with fork or whisk, close lid, and cook according to the below guide.



3 Enjoy!

Enjoy Fast, delicious, fluffy eggs every time! Serve eggs onto a plate or conveniently eat right out of Incrediegg!

⚠️ GENERAL WARNINGS

- Wash Incrediegg before first use.
- Contents and steam after heating is HOT. Use caution when removing and handling.
- Discard egg shells. Do not add shells to Incrediegg.
- Do not cook on stove top or in oven. Incrediegg is for microwave use only.
- Do not heat Incrediegg for more than 10 minutes continuously in microwave.
- Do NOT tape, tie, or glue closed before cooking. Pressure build up may cause damage or injury.

COOKING GUIDE

Scrambled, Eggwich Patty & Omelets
(keep this guide for future reference)

Contents and steam after heating is HOT. Use caution when removing and handling.

# of eggs	750-900 Watts	1000-1100 Watts	1200 Watts
1 egg	60 secs	50 secs	45 secs
* 2 eggs	1 min 40 secs	1 min 35 secs	1 min 30 secs
3 eggs	2 mins	1 min 50 secs	1 min 45 secs
4 eggs	2 mins 20 secs	2 min 10 secs	2 min

Boiled Eggs: 7-9 mins - *fill half way with water*
(Note: keep closed 5 extra minutes before opening)

Poached Eggs: 1:30-2 mins - *fill half way with water*
(Note: do not close lid completely - keep vented)

Cooking times are based on using extra large eggs and may vary depending on wattage of microwave and size of eggs used. If more cooking is needed, set to 15 second intervals until eggs are cooked to your liking. *** most common**

NOTE: Keep *Incrediegg* closed for an additional 1-2 minutes after microwaving to allow cooking of eggs to complete.

See delicious recipes on back ▶