

5. To turn the unit off, just twist the cup counter clockwise until the tabs of the cup and the tabs of the power base line up. Lift up the cup.

IMPORTANT: Always remember not to operate unit for more than 1 minute (60 sec) at a time as it can cause permanent damage to the motor. If the motor does stop working and there is no obstruction, unplug the unit. Remove the cup with blade and let the unit cool down for a few hours before trying to use it again. The internal mechanism shuts the unit off when it detects overheating.

COOKING IN CUP

You can place the cup with ingredients into the microwave to cook. Make soups, pasta sauces, melted cheeses and more. You can chop and then cook all in the same cup, eliminating extra dishes, pots and pans. What could be better!

NOTE: Always remember to remove the blade from the cup before placing into the microwave. Be careful when removing the cup as it might be very hot. Use oven mitts.

CLEANING CUP, COMFORT RING AND BLADE

IMPORTANT: Always make sure to unplug the blender unit before cleaning.

CAUTION: Never place your hands near the blade. Never place your hands or utensils into the Power Base (without cup) when the unit is plugged in.

All cup, comfort ring and blade (**NOT THE POWER BASE**) are dishwasher safe (top rack only). You may also hand wash all cup, comfort ring and blade (**NOT THE POWER BASE**) in warm soapy water. Be careful not to touch the blade with bare hands, blade is very sharp. Dry thoroughly.

CAUTION: Never submerge the Power Base in water or place in dishwasher due to risk of electric shock. Always wipe with moist cloth only. Dry thoroughly.

CLEANING THE POWER BASE

IMPORTANT: Always make sure to unplug the blender unit before cleaning.

CAUTION: Never submerge the Power Base in water or place in dishwasher due to risk of electric shock. Never place your hands near the blade. Never place your hands or utensils into the Power Base (without cup) when the unit is plugged in.

Always wipe the base with damp cloth in between uses. For tougher food clean-up, wipe the inside of the power base with damp cloth, make sure to clean activator mechanism tabs that make the blades move.

BIG BOSS™

MULTI BLENDER
Chops, Blends, Mixes, Purees, Grates,
Whips, Grinds & More!
300 Watt Power, 4 Pc. Set



BIG BOSS™ MULTI BLENDER 4PC. SET ITEM NO. 8866FE / 8867FE / 8868FE

Distributed by EMSON® NY, NY, 10001 ©Copyright 2012 EMSON®

All Rights Reserved. Printed in China.

www.emsoninc.com

Customer Service: 1-800-423-4248

INSTRUCTION MANUAL

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before use check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Always remember not to operate unit for more than 1 minute (60 sec) at a time as it can cause permanent damage to the motor. If the motor does stop working, unplug the unit. Remove the cup with blade and let the unit cool down for a few hours before trying to use it again. The internal mechanism shuts the unit off when it detects overheating.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
5. If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
6. When not in use, turn off and unplug blender from outlet before putting on or taking off parts, and before cleaning.
7. Do not let cord hang over edge of table or hot surface.
8. Do not immerse Power Base into water due to the risk of electric shock.
9. Always use your blender on a clean, flat, hard, dry surface.
10. To reduce the risk of injury, blade and cup must be completely assembled before placing on the Power Base.
11. Check gasket to make sure it is completely seated in the blade unit before each use.
12. Do not leave blender unattended during use.
13. Close supervision is necessary when your appliance is being used near children.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
15. Ensure fingers are kept well away from moving parts. Keep hands and utensils out of container while blender is running to reduce the risk of injury to persons or damage to the blender.
16. The use of accessories/attachments not recommended by the manufacturer may cause fire, electric shock or injuries to persons.
17. Do not operate the appliance for other than its intended use.
18. Do not use outdoors.

SAVE THESE INSTRUCTIONS. FOR HOUSEHOLD USE ONLY.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

IMPORTANT MICROWAVE SAFEGUARDS

- When microwaving, never place the cup with the blade still attached. Always remove the blade.
- When microwaving, use caution when removing hot cups, use oven mitts.
- Refer to your microwave handbook for the heating recommendations and precautions.
- Do not heat water or liquids in the microwave for extended periods of time.
- When microwaving, do not overcook food. Always pay close attention to items being cooked inside the microwave.
- Liquids, such as water, tea, coffee, are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave is not always present. Hot liquids inside the container may suddenly boil over when a spoon or other utensil is inserted into the liquid.



300 Watt Power Unit
contains powerful motor.
Place cup with blade for
powerful blending.

4 Pc. Set Includes:



1 Large cup (18 oz/532 ml)
with 1 Comfort Ring
cup used for mixing ingredients
and ring provides comfort when
drinking right from the cup.



Multi-Purpose Blade
used for all-purpose
blending/mixing.

BEFORE FIRST USE

Unpack all of the pieces. Rinse cup, comfort ring and blade in warm soapy water. Be careful not to touch the blade with bare hands, blade is very sharp. Dry thoroughly. Do not submerge the Power Base in water due to risk of electric shock. Always wipe with moist cloth only. Dry thoroughly.

HOW IT WORKS:

CAUTION: Never place your hands near the blade. Never place your hands or utensils into the Power Base (without cup) when the unit is plugged in.

1. Place the desired ingredients into a cup.
2. Place the blade on by twisting it until there is a tight seal.
3. Line up the tabs of the cup with the tabs of the Power Base. Press down on the cup to turn the unit on. The unit will remain on until you let go of the cup.

YOU CAN PROCESS FOODS SEVERAL WAYS:

A Just press the top of the cup and immediately release. This way you process food so it's coarsely chopped, perfect for chunky salsa and coarsely chopped onions. Keep pressing and releasing until you achieve the desired consistency. You can support the unit with your other hand to make sure that the unit will not go into "continuous blending" mode (explained in #4 below).

B If you notice that certain ingredients are not being processed and getting stuck to the sides or bottom of the cup, just remove the cup with blade from the Power Base and shake or tap the cup on the table or counter. Place it back into the Power Base.

4. For continuous blending, turn the cup clockwise until the tabs of the cup fit under the lip of the Power Base. This way the unit will operate without you holding the cup down.

CAUTION: If the blade stops while in continuous blending mode, immediately unplug the blender unit. This could happen if you are chopping/grinding a hard ingredient. It could get stuck between the blade and the side of the cup, preventing the blade from turning. To fix the problem, **ALWAYS UNPLUG THE UNIT FIRST.** Then remove the cup with blade and shake or tap the cup to unblock the blade. If that will not work, twist off the blade from the cup and manually rotate the blade. Once the obstruction is cleared and blade moves freely - assemble the blade and the cup, and place into the Power Base. Try chopping again.



Twist Cup onto
Blade Firmly

Blade Unit with Cup Attached
Locks into Base/Power Unit

Simply Press Down
on Cup to Operate