

SPIN & SCRUB POWER SCRUBBER

Instruction Manual

Warnings:

This product is not fully water proof. If water gets into it, please dry as soon as possible. Any remaining water may damage the product.

Please do not clean the Spin & Scrub handle with chemicals or bleach. This may damage the product.

Please take the batteries out if you will not use for prolonged periods. Battery leakage may damage product.

While using or cleaning this product, please do not use water that is over 158°F. Hot water may cause damage.

After each use, remove the brush head from main unit and wash under running water.



Using the Spin & Scrub:

Attach the brush or sponge to the unit.

Apply detergent to the sponge or the brush.

Press the button so that the sponge or the brush will rotate.

After using this product, please rinse out the detergent on the head with water.

Using the Sponge and Polisher heads:

To keep the Sponge and Polisher heads shape, only use when the head is dry.

Using the hook attachment:

The Spin & Scrub can be stored with the included hook.

Find a smooth, flat and clean surface.

The round face of hook is attached with a sticker. Remove the paper and stick the hook to tile.

Please make sure that the handle does not come off when it is attached. To lift off, press the handle and push it upward so it comes off the hook.

Replacing Batteries:

Turn off the Spinning Brush.

Unlock the battery compartment and replace 4 new AA batteries (not included).

Make sure battery is inserted in the correct polarity.

Lock battery compartment.

Note: Please always use alkaline or heavy duty batteries.

Uses 4 AA batteries. (Not included)

Warning: Do not mix old and new batteries. Do not mix alkaline, standard or rechargeable batteries. Please make sure the motor head unit is placed on the handle tight to make sure the batteries make proper contact with the motor.

