

## MANUAL (ENGLISH)

### Recharging Power Bank

- Before using the wireless power bank for the first time please charge the power bank fully. We recommend USB chargers with a 2A output. Charging time is between 5-6 hours for a full charge using a charger with 2A output.
- Connect the Micro USB connector of a USB cable (included) into the Micro USB input port or a Type-C cable (not included) into the Type-C input port. Connect the other end of the cable to a USB charger (not included).
- When charging, the LED indicators will blink. Each light indicates 25% charge. When fully charged all LED lights will stop blinking.
- When not connected with an external power source, the device supports two separate modes: wired and wireless charging mode.

2

### Wireless Charging Mode

- To activate wireless charging mode, press the power button on the power bank to turn it on. The power bank is now ready for wireless charging.
- Place your Qi compatible smartphone onto the power bank making sure its centered on the wireless icon. For best results, make sure your smartphone is close to the center of the power bank. The charging indicator light will slowly blink red.
- To deactivate wireless charging mode, double click the power button and the red LED indicators will turn off indicating that wireless charging mode is off.

### Wired Charging Mode

- To charge a compatible device with wired charging, connect it to the USB output port with your smartphones charging cable (not included).
- To activate wired charging mode, triple click the power button. Once activated the blue LED indicators will remain on. The power bank is now ready for wired charging.
- To deactivate wired charging mode, remove the charging cable and wait approximately 30s, blue LED indicators will turn off indicating that wired charging mode is off.

3

### **Safety and Care Instructions:**

- Do not attempt to disassemble the unit.
- Repairs to electrical equipment should only be performed by a qualified service person. Improper repairs may place user as risk and void warranty.
- Do not puncture or harm the exterior surface of the product in any way.
- Do not drop or let the unit fall from high places, as doing so may damage the device.
- Do not use this unit for anything other than its intended user or purpose. Doing so may damage the device and void warranty.
- This product is not a toy. Keep out of reach of children.
- Do not expose batteries or battery pack to excessive heat or open flame.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the device, destroy the battery, and /or distort certain parts.
- Do not use abrasive cleaning solvents to clean the unit. In order to prolong battery life, turn off when not in use.

### **Specifications:**

- Battery Type- 10,000 mAh lithium battery
- Input- DC 5V 2.0 Amp
- Output- DC 5V 2.1 Amp
- Wireless Output 5 Watt

5



WIRELESS CH  
POWER BA  
CHARGEUR PORTABLE 1



FRANÇAIS

855-999-8041 | www.XtremeCables.com