


USER GUIDE

Sonorous Portable Speaker

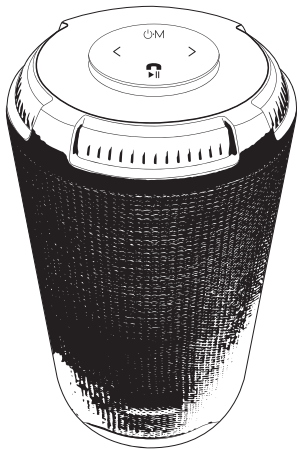

What's Included

- Sonorous Speaker
- Micro USB Charging Cable
- User Manual
- 1 Year limited warranty against defects

Charging

• Before using your SoundBound Sonorous Speaker, please charge using the included micro USB cable. Please note: Most USB chargers are compatible with SoundBound Sonorous Speaker. For optimal AC charging, please use a 1.0A USB Charger.

On/Off

• Sonorous Speaker can be powered On or Off by a long press on the "Power On/Off" Switch on the top of the Sonorous Speaker.

Please note: (In case the battery voltage is too low, the red light will flicker & the speaker will automatically shut down. If insufficient power is available, the speaker will need to be re-charged prior to powering back on)

Pairing

- After switching the "Power On/Off" button, the Sonorous Speaker will Power On & automatically enter "Wireless Mode" for pairing. A blue light will rapidly blink at the top of the Sonorous Speaker.
- On your Mobile Device, search for the "Wireless Menu." A list of available devices will show available for pairing. Select "Sonorous Speaker" & the speaker will automatically pair with your device for use.
- Once paired to your mobile device the Sonorous Speaker will automatically re-pair if shut down or powered off and back on.

Please note: If the Sonorous Speaker does not show up in your Wireless menu please turn off Wireless on your mobile device & turn back on. Sometimes, Wireless needs to refresh/reset to recognize available devices

Volume/ Audio Track Functions

- Raise Volume by long press multifunction button "Raise Volume/ Switch Tracks" or by pressing volume button on your mobile device
- Lower Volume by long press multifunction button "Lower Volume/ Switch Tracks" or by pressing volume button on your mobile device
- Short press "< or >" multifunction button to switch tracks forward or back.

Switching between FM Mode & Wireless mode, Aux mode (For TF/SD/ USB Slot)

- Single short press "Power On/Off / M" function button to switch between various mode setting on the Sonorous Speaker. Once desired mode is set, to switch to other modes, tap again.

FM Mode Use

- When in FM Mode, single long press "Play/Pause" function button & wait about 1-2 minutes. The Sonorous Speaker will scan, search, & store, available FM Radio Stations. Once completed, the first station discovered will transmit FM Radio.
- To switch to the next stored station, short press "< or >" multifunction button.

Please Note: While in FM mode, plug in charging cable in order to tune clearer FM radio stations if there is distortion in the audio playback.

Wireless Mode Use


- After Pairing mobile device, begin playing audio from mobile device to stream audio. Short single press "Play/Pause" function button to play or pause streaming audio.
- To switch to the next audio track, short press "< or >" multifunction buttons.

True Wireless Pairing

To enable True Wireless Pairing (streaming audio from your mobile device to two speakers, follow the steps below.

Prior to connecting the speaker with any Mobile device, ensure both speakers are turned on. Next, long press the "M" button on either speaker to connect to the other one (does not matter which speaker is pressed). You will hear a sound alert announce to confirm the 2 speakers have paired successfully.

Next you can proceed with pairing to your mobile device as described under "Pairing" & search for "Sonorous Speaker" to connect. You will hear a sound alert announce once your device has paired to the speakers successfully. (Please note- Sonorous Speaker will be displayed in the mobile device's Wireless Menu as one device listed after pairing in True Wireless Mode). Once paired with your mobile device, streaming audio will play from both speakers.

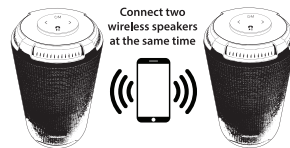

Style #: Sonorous Speaker
Material: Plastic
True Wireless 5.0
Working Range : 10M
Battery Capacity: 2000 mAh
Power input: DC5V Micro USB Cable
Supported Modes: SD Card Slot, TF Card Slot, USB Input, FM Radio, Wireless Mode
Frequency Response Range 100Hz-20Khz
Signal to noise ratio 84Db or higher
Output Power 5W
Speaker Specification 66mm x 1
Playing Time Up to 6 Hours
Charging Time 2.5 Hours
Input Power Supply DC5V-500mAh
*Playback Time mentioned may vary by user's operation mode & device settings

© 2019 Lifeware Group, SoundBound NY, NY 10018

The Bluetooth® word mark & logos are owned by Bluetooth® SIG, Inc. All other trademarks & trade names are those of their respective owners. The illustrated products may slightly differ from those supplied.

Made in China

Play/Pause
Answer/End Calls
Function Button

Power On/Off
Switch FM Radio Mode
Function Button

Lower/Raise Volume
or Switch tracks
& Rewind Function
Buttons

