



SONNET

AM/FM 0.9 LED CLOCK
RADIO WITH AUX-IN
AMPLIFICATION AND 2
USB AND 2 110V OUTPUT

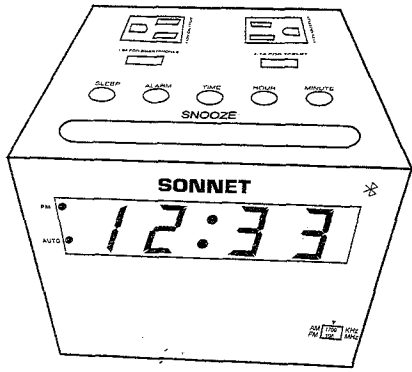

Model No.: R-1415BT OWNER'S MANUAL

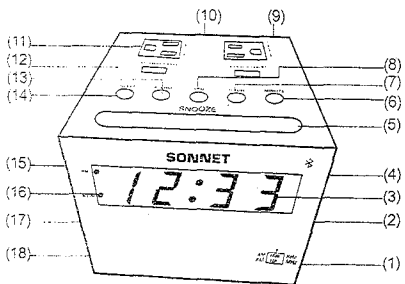

- | | |
|-----------------------------|--------------------------|
| 1. TUNING KNOB | 10. BATTERY COMPARTMENT |
| 2. AM/FM-CHARGER SELECTOR | 11. 110V OUTPUT SOCKET |
| 3. RED LED DISPLAY | 12. USB CHARGING |
| 4. VOLUME/BUZZER CONTROLLER | 13. ALARM SET/OFF BUTTON |
| 5. SNOOZE BUTTON | 14. SLEEP BUTTON |
| 6. MINUTE SET BUTTON | 15. ON/OFF/AUTO BUTTON |
| 7. HOUR SET BUTTON | 16. ALARM ON INDICATOR |
| 8. TIME SET BUTTON | 17. SPEAKER |
| 9. AUX CABLE | 18. BT/AUX/RADIO BUTTON |

OPERATING INSTRUCTIONS

- ON/OFF/AUTO...** slide the switch to turn radio "ON", "OFF" or "AUTO" position. When the switch is in the "ON" or "OFF" position, it means the radio will turn on or turn off; when in the "AUTO" position, it will permit the alarm automatically.
- TIME SET BUTTON...** Press this button simultaneously with the HOUR or MINUTE button to set the desired time.
- ALARM SET BUTTON...** Press this button simultaneously with the HOUR or MINUTE button to set the desired wakeup time.
- SLEEP SET BUTTON...** Press this button to display the number of minutes (59 or less) which the radio will sound for and will automatically turn off after then.
- HOUR AND MINUTE buttons...** Use these buttons to set the time while pressing.
- AM/FM-CHARGER selector...** Slide the selector to select the AM/FM desired radio band or USB charging.
- VOLUME/BUZZER CONTROLLER...** The alarm preset will be wake to buzzer; when you play the radio, please adjust the volume to desired level.
- TUNING KNOB...** Turn this knob to the desired radio station.
- SNOOZE BUTTON...** When you are awakened by music or buzzer but wish to sleep a few minutes more simply touch the "snooze" button and it will shut off the music or buzzer for 9 minutes before the music or buzzer sounds again. This can be repeated several times.



CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT, "WARNING: TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PER SONNET.

IMPORTANT SAFEGUARDS FOR AUDIO PRODUCTS PLEASE READ CAREFULLY ALL THE FOLLOWING IMPORTANT SAFEGUARDS THAT ARE APPLICABLE TO YOUR APPLIANCE

- All the safety and operating instructions should be read before the appliance is operated.
- The safety and operating instructions should be retained for future reference.
- All warnings and cautions on the appliance and in the operating instructions should be adhered to.
- All operating and use instructions should be followed.
- The appliance should not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool etc.
- The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- An outdoor antenna should be located away from power lines.
- The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings, or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.

- BT/AUX/RADIO BUTTON... When you push the button to BT position, the Bluetooth will be on and ready to connect; AUX means you can use the unit for amplification; Radio means the radio is on.

POWER SOURCE

Plug the AC line cord into the 120V/60Hz power outlet. The unit is now working and the display figures will blink to show you to set the correct time.

TO SET THE CLOCK

Press the TIME SET BUTTON together with the HOUR BUTTON or MINUTE BUTTON to set the correct time.

TO SET THE ALARM TIME

Step 1 Press the Alarm set button to check the alarm time.
Step 2 Press the Alarm set button together with the HOUR or MINUTE button to adjust the alarm time.

NOTE: Slide the ON/OFF/AUTO switch to "AUTO" position, a glowing dot appears on the lower left corner of the display, indicating that the alarm has been set to operate.

TO PLAY THE RADIO

Step 1 Slide the ON/OFF/AUTO switch to "ON" position.
Step 2 Slide AUX/AM/FM switch to desired AM or FM band.
Step 3 Select the desired radio station by turning the Tuning knob.
Step 4 Adjust the Volume to the desired listening level.

TO WAKE TO RADIO

Step 1 Set the alarm time as previously instructed.
Step 2 Turn the radio on select the desired radio station and volume setting as previously instructed.
Step 3 Slide the ON/OFF/AUTO switch to "AUTO" position. Your unit is now set to turn on automatically at the pre-selected alarm time.

TO WAKE TO BUZZER

Step 1 Set the alarm time as previously instructed.
Step 2 Slide the ON/OFF/AUTO switch to "AUTO" position. You will awakened at the pre-selected alarm time by the buzzer tone. To turn the Buzzer off, slide the ON/OFF/AUTO switch to "OFF" position or press ALARM SET/OFF Button.

AUX-IN AMPLIFICATION

Your clock radio has a special feature, you can amplify the sound from your MP3, iPod, tape player or any audio device through your clock radio. Just follow the steps below:

- Plug the AUX cable into the earphone jack of your portable device like MP3 or iPod.
 - Turn power of your portable device on.
 - Slide AUX/AM/FM SELECTOR to "AUX" position and adjust volume.
- Then you can enjoy your music.

USB CHARGING

Slide the AM/FM-CHARGER selector to the FM-CHARGER position, then you can charge your smartphone or tablet.

- The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliance (including amplifiers) that produce heat.
- The appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance.
- Precautions should be taken so that grounding or polarization means of the appliance is not defeated.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- The appliance should be cleaned only as recommended by the manufacturer.
- The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- The appliance should be serviced by qualified service personnel when:
 - The power supply cord or the plug has been damaged; or
 - Objects have fallen, or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain; or
 - The appliance does not appear to operate normally or exhibits a marked change in performance or
 - The appliance has been dropped, or the enclosure damaged.
- Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

SPECIFICATIONS

Power Source	: AC 120V/60Hz
Output Power	: 500mW music
Power Consumption	: 1.5W
Frequency Range	: AM 530-1700 KHz FM 88 - 108 MHz
Clock Display	: 0.9" Red Display
AC Output	: 120V~5A
USB Output	: DC 5V = 1000mA DC 5V = 3100mA

BLUETOOTH FUNCTION

The clock radio has the Bluetooth function, you can use it to amplify the sound from your Smartphone or Tablet PC, just follow the steps below:

- Push the ON/OFF/AUTO BUTTON to "ON" position, and adjust the VOLUME level.
 - Push the BT/AUX/RADIO BUTTON to "BT" position. The Bluetooth is now working.
 - Open your smartphone or Tablet PC's Bluetooth function, your device will auto-searching and will find the "R-1415BT" Bluetooth and select it.
 - Play the music from your Smartphone or Tablet PC, and adjust the Volume level.
- Now you can enjoy the music through your "R-1415BT".

SLEEP CONTROL

- Slide the AUTO/OFF/ON switch to "AUTO" position.
- Press the Sleep set button to display the sleep time. The display will indicate 59 minutes. If you wish the radio to play for a shorter period simply press the Sleep set button together with the MINUTE button to set the desired time period. Or if you wish to play longer, press sleep button along with HOUR button to play for 1 hour and 59 minutes.
- Press the sleep set button. The radio will turn on automatically and will turn itself off when the present time has passed.

NOTE: The maximum sleep time is 1 hour and 59 minutes. The radio will be switched off automatically when the sleep time expires. To turn the radio off before expiration of sleeping time, simply press the "SNOOZE BUTTON".

ALARM OFF

Slide the AUTO/OFF/ON switch to "OFF" position if you wish to turn off the radio or buzzer after the radio or buzzer has sounded in the Wake to Radio or Wake to Buzzer operation. The Alarm will not sound again until the next day unless you switch back to auto position or use alarm button to shut off alarm, then the radio or buzzer will automatically sound again in 24 hours at the same alarm setting.

BATTERY BACK-UP

Your clock has a battery back up feature in case of power failure. A 9 volt battery (not included) is required. You must put in a battery to ensure the battery back up feature is ready in case of power failure. If power fails, the back up battery will automatically continue operation of the clock and maintain actual time. However, the display will not be lighted. When electrical power is restored, the display will light up again. The battery will maintain timekeeping for approximately 8 hours during power failure or interruption. **NOTE:** Remove the battery of the clock is to be unplugged for a long time to avoid unnecessary battery drain.