3. Press **<SET>** key once to enter Calendar Setting mode.
4. To set Month – Press **<MONTH>** key to adjust month.
   To set Dates – Press **<DATE>** key to adjust dates.
   To set Weekly Day – Press **<WEEK>** key to adjust weekly day.
5. Press **<SET>** key once to finalize calendar setting and return to Normal Calendar display.

Alarm Setting Mode

1. Press **<ALARM>** key to enter Alarm Setting Mode.
2. Press **<AL ON/OFF>** key to select Alarm On or Alarm Off mode.
3. Press **<SET>** key once to enter Alarm Setting Mode.
4. Press **<HOUR>** key to adjust alarm hour.
5. Press **<MINTUE>** key to adjust alarm minutes.
6. Press **<SET>** to finish Alarm Time Setting.
7. Push **'TIP TOUCH'** once to return back to Normal Clock Display.

Operating the Alarm

1. When the alarm buzzer sounds, press **ANY** key to shut it and reset the alarm for the same time the following day. (The Alarm On Indicator remains to the display.)
2. To turn off the alarm completely, follow Steps 1 and 2 in Setting the Alarm, the time pressing the **<AL ON/OFF>** key to turn off the Alarm On Indicator .

Calculator

1. Push the **'TIP TOUCH'** once to enter Calculator Mode.
2. Calculator operation are +, -, x, /, M+, M-, and MRC.
3. Press **<AC/CE>** key or push the **'TIP TOUCH'** to clear all input data or operation.
4. Push the **'TIP TOUCH'** again to return to Normal Clock Display.

Key Tone

Press **<KEY TONE>** key to toggle key tone at any time and at any mode.

Install the battery

a. Use a screwdriver to remove the screw on the lid of the battery compartment located on top of the lower back case.
b. Insert 1 "AAA" battery **(not included)** in the battery compartment according to the polarity symbols (+ and -) marked inside.
c. Close the battery compartment by replacing the lid with screw.

For the Best Possible Battery Performance:

- We recommend the use of alkaline batteries for longer life.
- Battery are to be insert with correct polarity.
- Remove exhausted battery from the clock calculator.
- Do not attempt to recharge non-rechargeable batteries.
- Battery should be removed if the item is not going to be needed for an extended period of time to prevent leakage or damage to the clock calculator.

Handling Precaution

1. Avoid use and storage in areas subjected to temperature extremes. Very low temperatures can cause slow display response, total failure of the display and shortening of battery life. Also avoid leaving the clock calculator in direct sunlight, near exposed to very high temperatures. Heat can cause discoloration or deformation of the case and damage to internal circuitry.
2. Avoid use and storage in areas subjected to large amounts of humidity and dust.
3. Never drop the clock calculator or otherwise subject it to strong impact.
4. Never twist or bend the clock calculator. Avoid carrying the clock calculator in the pocket of your trousers or other tight-fitting clothing where it might be subjected to twistingor bending.
5. Never press the keys on the panel with a ball - point pen or other pointed object.
6. Use a soft, dry cloth to clean the exterior of the clock calculator. Never use thinner, benzene or other volatile agents to clean the clock calculator. Doing so can remove printed markings and can damage the case.

Made in China
© Design Registered 2004 China, Hong Kong & USA

'Tip Touch'

Calc-Time / Alarm / Calendar

INSTRUCTION MANUAL

Front

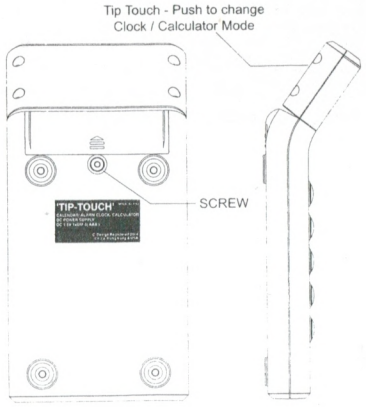

Back Side

Feature:

1. Calendar/Clock Mode with calendar, month, date, weekly day, hour, minute and second
2. Daily Alarm Clock
3. 8-digit Calculator
4. Selectable Key Tone
5. 12-hr and 24-hr Time Display Selection

At Normal Display:

Displays Clock Mode
(showing Hour/Minute/second/weekly day)

Changing Display Mode:

1. At Normal Clock Display.
2. Push **'TIP TOUCH'** once to enter Calculator Mode.
3. Push **'TIP TOUCH'** once more to return back to Normal Clock Display.

Operation Instruction:

Clock Setting Mode

1. At Normal Clock Mode.
2. Press **<SET>** key once to enter Clock Setting mode.
3. To set Hours – Press **<HOUR>** key to adjust hours.
   To set Minutes – Press **<MIN>** key to adjust minutes.
   To set seconds – Press **<SEC>** key to adjust seconds.
4. Press **<SET>** key once to finalize time setting and return to Normal Time display.

Remark: 1 'Dot' on LCD display is shown for weekly day.(Shown on **Time Mode**)

12-hr and 24-hr Time Display Selection

1. At Normal Clock Mode.
2. Simply press **<12/24>** key to switch the mode between 12-hr and 24-hr time display.

Calendar Setting Mode

1. At Normal Clock Mode.
2. Press **<CALENDAR>** key to enter Normal Calendar Display.