


JB7498 Emergency Recording Band

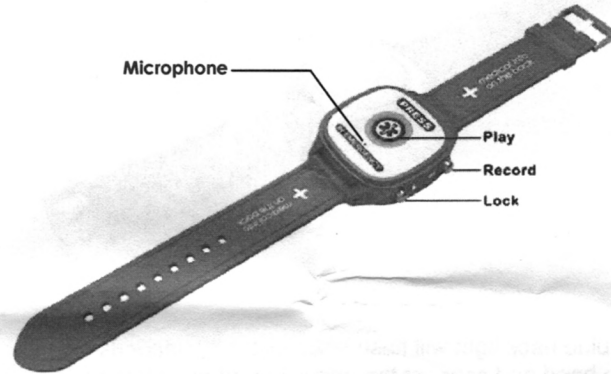

Instructions:

1. How to Record

- Press the record button once to begin recording. The unit will beep for 3 seconds and flash 3 times to indicate recording has started. Speak loud and clear into the microphone to record a clear message.
- Press the record button again to stop recording. The unit will beep for 3 seconds and flash 3 times to indicate recording has ended (Maximum recording time is 30 seconds.). Other buttons will not function during recording.
- New recording will automatically erase previous recording. Only one recording can be saved.

For your convenience we've included a script with the suggested emergency information for you to fill in the blank and record:

My name is _____.

My date of birth is _____.

My medical condition is _____.

My emergency contact information is _____.

My doctor's name is _____.

My doctor's contact information is _____.

My daily medications are _____.

Note: We've also included a round sticker for you to fill in the blank with your Name, Telephone number, and any Remarks necessary. Simply fill in the blanks with your information and stick this round sticker on the back of the band, and place the clear round sticker over your information to protect your information from smearing.

2. How to Lock and Unlock Recording

- After recording, press the lock button to prevent losing the recording. The unit will flash once to indicate your recording is locked.
- Press and hold the lock button for 3 seconds to unlock recording and record a new message. The unit will flash two times to indicate the recording is unlocked.

3. Charging The Battery



- When the battery is low, the blue back light will flash twice every 30 seconds. To charge the battery plug the USB cable (included) into the side of the band and connect the opposite end to a USB power source.
- The back light will light up in red when charging and it will turn off when the battery is fully charged.

4. How to Use

- For any type of emergency, immediately press the play button, the alarm will sound for 5 seconds, then the saved recording will play (the flashing light will flash through the entire cycle). After the entire message is played, the unit will continue to repeat this process until the Play button is pressed for a second time. If the Play button is not pressed for the second time, the band will play and repeat your entire recorded message continuously for approximately 1 hour and 30 mins. Other buttons do not function during this process.
- When help arrives, the emergency personnel will hear your recording and read your medical information on the back of the band.
- If you do not activate the item, any emergency personnel will still easily find the device and can access the recording by following the instructions on the band.

Medical Disclaimer:

This device and manual are not meant to be a substitute for advice provided by doctors or other medical professionals. If you have or suspect you have a medical problem, promptly consult your physician or go to an emergency room.